



Ruijie Reyee RG-EST350G Wireless Bridge

Installation Guide

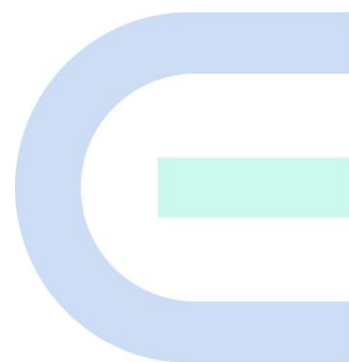

Copyright

Copyright © 2025 Ruijie Networks

All rights are reserved in this document and this statement.

Any reproduction, excerption, backup, modification, transmission, translation or commercial use of this document or any portion of this document, in any form or by any means, without the prior written consent of Ruijie Networks is prohibited.

Trademarks including  are owned by Ruijie Networks.

All other trademarks or registered trademarks mentioned in this document are owned by their respective owners.

Disclaimer

The products, services, or features you purchase are subject to commercial contracts and terms, and some or all of the products, services, or features described in this document may not be available for you to purchase or use. Except for the agreement in the contract, Ruijie Networks makes no explicit or implicit statements or warranties with respect to the content of this document.

The names, links, descriptions, screenshots, and any other information regarding third-party software mentioned in this document are provided for your reference only. Ruijie Networks does not explicitly or implicitly endorse or recommend the use of any third-party software and does not make any assurances or guarantees concerning the applicability, security, or legality of such software. You should choose and use third-party software based on your business requirements and obtain proper authorization. Ruijie Networks assumes no liability for any risks or damages arising from your use of third-party software.

The content of this document will be updated from time to time due to product version upgrades or other reasons, Ruijie Networks reserves the right to modify the content of the document without any notice or prompt.

This manual is designed merely as a user guide. Ruijie Networks has tried its best to ensure the accuracy and reliability of the content when compiling this manual, but it does not guarantee that the content of the manual is completely free of errors or omissions, and all the information in this manual does not constitute any explicit or implicit warranties.

Preface

Intended Audience

This document is intended for:

- Network engineers
- Technical support and servicing engineers
- Network administrators

Technical Support

- Official Website of Ruijie Reye: <https://reyee.ruijie.com>
- Technical Support Website: <https://reyee.ruijie.com/en-global/support>
- Case Portal: <https://www.ruijienetworks.com/support/caseportal>
- Community: <https://community.ruijienetworks.com>
- Technical Support Email: service_rj@ruijienetworks.com
- Online Robot/Live Chat: <https://reyee.ruijie.com/en-global/rita>

Conventions

1. Signs

The signs used in this document are described as below:

Danger

An alert that calls attention to safety operation instructions that if not understood or followed when operating the device can result in physical injury.

Warning

An alert that calls attention to important rules and information that if not understood or followed can result in data loss or equipment damage.

Caution

An alert that calls attention to essential information that if not understood or followed can result in function failure or performance degradation.

Note

An alert that contains additional or supplementary information that if not understood or followed will not lead to serious consequences.

Specification

An alert that contains a description of product or version support.

2. Note

This manual provides the device installation steps, hardware troubleshooting, module technical specifications, and specifications and usage guidelines for cables and connectors. It is intended for the users who have some experience in installing and maintaining network hardware. At the same time, it is assumed that the users are already familiar with the related terms and concepts.

Contents

Preface	1
1 Product Introduction	1
1.1 Overview	1
1.2 Package Contents.....	1
1.3 Appearance.....	2
1.3.1 Appearance	2
1.3.2 Ports, Buttons and LEDs	3
1.4 Device Specification	5
1.5 Power Supply Technical Specification	6
2 Preparing for Installation	8
2.1 Safety Precautions.....	8
2.1.1 General Safety Precautions.....	8
2.1.2 Handling Safety.....	8
2.1.3 Electrical Safety	8
2.2 Installation Environment Requirements.....	9
2.2.1 Environment.....	9
2.2.2 Surge Protection	9
2.2.3 Temperature and Humidity.....	9
2.2.4 Anti-interference.....	10
2.3 Tools	10
2.4 Checking Before Installation	10
3 Installation	11
3.1 Installation Procedure	11

3.2 Before You Begin.....	11
3.3 Safety Precautions During Installation	12
3.4 Mounting the Device	12
3.4.1 Wall Mounting	12
3.4.2 Pole Mounting	13
3.5 Connecting Cables.....	14
3.6 Verifying the Installation.....	16
4 Debugging	17
4.1 Power-On.....	17
4.2 Configuring the Bridge	17
5 Monitoring and Maintenance.....	18
5.1 Monitoring	18
5.2 Maintenance	18
6 Troubleshooting.....	19
6.1 General Troubleshooting Procedure	19
7 Appendix A Connectors and Media Description.....	20

1 Product Introduction

1.1 Overview

The RG-EST350G is an 802.11ac wireless bridge launched by Ruijie Reyee. It provides surveillance video backhaul function. RG-EST350G works in the 5 GHz frequency band, supports two spatial streams and 2 x 2 MIMO, and provides a wireless link speed of up to 867Mbps. The RG-EST350G utilizes the 2.4 GHz band in single-stream mode for bridge management, while the 5 GHz band is used for data transmission. The design of RG-EST350G adapts to inclement outdoor environments such as the cold and humidity. This substantially simplifies installation and maintenance.

1.2 Package Contents

Table 1-1 Package Contents

No.	Item	QTY
1	RG-EST350G (Network Video Recorder End)	1
2	RG-EST350G (Camera End)	1
3	24 V DC/0.6 A Power Adapter	2
4	Universal Joint	2
5	Universal Joint Nut	2
6	Hose Clamp	2
7	Mounting Bracket	2
8	1000 Mbps Passive PoE Injector	2
9	Product Manual	1
10	Warranty Card	1
11	Wall Anchor	6
12	Phillips Pan Head Screw (ST4.2x19)	8

Note

The package contents above are intended to provide a general overview, and are subject to the terms of the order contract. Please check your goods carefully against the package contents or order contract. If you have any questions, please contact the distributor.

1.3 Appearance

1.3.1 Appearance

Figure 1-1 Appearance of the RG-EST350G Wireless Bridge

Front View



Back View



i Note

The label is located on the back of the device.

1.3.2 Ports, Buttons and LEDs

Figure 1-2 Ports, Buttons and LEDs of the RG-EST350G Wireless Bridge

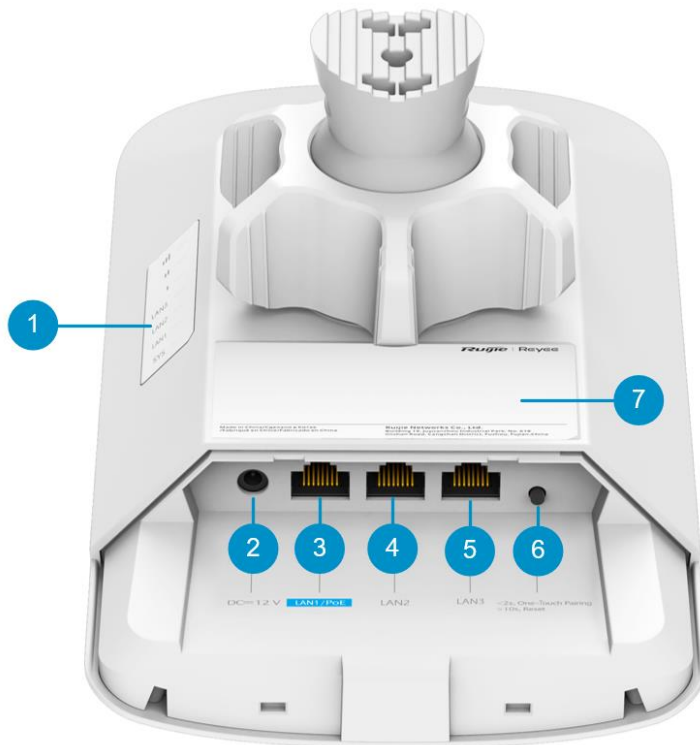


Table 1-2 Ports, Buttons and LEDs of the RG-EST350G Wireless Bridge

Mark	Item	Description
1	Status LEDs	7 status LEDs, including 1 x system LED, 3 x port LEDs and 3 x signal LEDs
2	12 V DC connector	Support 12 V/1.2 A DC power supply
3	LAN1/PoE Port	10/100/1000BASE-T Ethernet port, support 802.3af/at PoE or 24V=0.6A passive PoE
4	LAN2 Port	10/100/1000BASE-T Ethernet port
5	LAN3 Port	10/100/1000BASE-T Ethernet port

Mark	Item	Description
6	Reset/One-Touch Pairing button	<ul style="list-style-type: none"> ● Press and hold the button for less than 2s: The wireless bridge pairs with another wireless bridge (the LED blinks during pairing). ● Press and hold the button for 2s to 10s: No action is triggered. ● Press and hold the button for more than 10s: Restores the wireless bridge to factory settings.
7	Label	Contains the product name, model, I/O parameters, default IP address, and other information.

Note

- After the One-Touch Pairing button is pressed, the wireless bridge is switched to the BaseStation mode regardless of whether it was in BaseStation or CPE mode.
- During one-touch pairing, the signal LEDs on the wireless bridge in BaseStation mode blink for 1 minute (it will stop blinking after 1 minute if no bridge connection is established). The signal LEDs on the bridge in CPE mode also blink until the pairing is complete.
- Only a bridge that has been reset to factory settings and has not been bridged before can be switched to the CPE mode through one-touch pairing.
- The one-touch pairing feature is enabled by default and can be disabled through eWeb.
- One-touch pairing is disabled during interference scanning.

Table 1-3 LEDs

LED	Status	Description
System LED	Solid green	The device is operating normally.
	Blinking	<ul style="list-style-type: none"> ● Fast blinking (8 to 10 times/second): The device is starting up. ● Fast blinking (2 times/second): The device is initializing. ● Fast blinking (2 times/second): The device is upgrading.
	Off	The device is NOT receiving power.
LAN1/LAN2/LAN3 port LED	Solid green	A valid link is established, but the port is not receiving or sending data.
	Blinking green	A valid link is established, and the port is receiving or sending data.
	Off	No link is established.
Signal LEDs	Off	The device is not bridged.
	LED 1 on/blinking	The device is bridged and the RSSI is below -75 dBm.
	LED 1 on	The RSSI is above -75 dBm.

LED	Status	Description
	LED 1 on, LED 2 blinking	The RSSI is above -73 dBm.
	LEDs 1 and 2 on	The RSSI is above -71 dBm.
	LEDs 1 and 2 on, LED 3 blinking	The RSSI is above -68 dBm.
	LEDs 1, 2, and 3 on	The RSSI is above -64 dBm.
	LEDs 1, 2, and 3 blinking	The mesh pairing is in progress.

1.4 Device Specification

Table 1-4 Specifications

Model	RG-EST350G
Radio Design	<ul style="list-style-type: none"> ● 2.4 GHz: single-stream ● 5 GHz: dual-stream 2x2 MIMO
Protocol and Standard	<ul style="list-style-type: none"> ● 5 GHz: 802.11ac/n/a ● 2.4 GHz: 802.11b/g/n
Operating Frequency Bands	<ul style="list-style-type: none"> ● 2.4 GHz: 802.11 b/g/n: 2.4000 GHz to 2.483 GHz ● 5 GHz: 802.11a/n/ac: 5.150 GHz to 5.350 GHz, 5.470 GHz to 5.725 GHz, 5.725 GHz to 5.850 GHz <hr/> <p>Note</p> <p>Country-specific restrictions apply.</p> <hr/> <ul style="list-style-type: none"> ● European Union & United Kingdom: 2400 MHz to 2483.5 MHz, EIRP ≤ 20 dBm; 5470 MHz to 5725 MHz, EIRP ≤ 30 dBm ● Myanmar: 2400 MHz to 2483.5 MHz, EIRP ≤ 23 dBm; 5725 MHz to 5825 MHz, EIRP ≤ 30 dBm ● Thailand: 2400 MHz to 2483.5 MHz, EIRP ≤ 20 dBm; 5470 MHz to 5725 MHz, EIRP ≤ 30 dBm; 5725 MHz to 5825 MHz, EIRP ≤ 30 dBm ● Indonesia: 2400 MHz to 2483.5 MHz, EIRP ≤ 27 dBm; 5725 MHz to 5825 MHz, EIRP ≤ 23 dBm ● Egypt: 2400 MHz to 2483.5 MHz, EIRP ≤ 20 dBm; 5150 MHz to 5350 MHz, EIRP ≤ 23 dBm
Antenna Type	Built-in antenna (horizontal/vertical): 31°/14°
Antena Gain	<ul style="list-style-type: none"> ● 2.4 GHz: 2 dBi ● 5 GHz: 16 dBi
Working Distance	5 km (3.11 mi)
Data Rate	<ul style="list-style-type: none"> ● 2.4 GHz: 150 Mbps ● 5 GHz: 867 Mbps
Modulation Technology	<ul style="list-style-type: none"> ● OFDM: BPSK@6/9 Mbps, QPSK@12/18 Mbps, 16-QAM@24/36 Mbps, 64-QAM@48/54 Mbps ● MIMO-OFDM: BPSK, QPSK, 16-QAM, 64-QAM, 256-QAM

Model	RG-EST350G
Receive Sensitivity	<ul style="list-style-type: none"> ● 11a: -89 dBm (6 Mbps), -80 dBm (24 Mbps), -76 dBm (36 Mbps), -71 dBm (54 Mbps) ● 11n: -83 dBm@MCS0, -65 dBm@MCS7, -83 dBm@MCS8, -65 dBm@MCS15 ● 11ac: -86 dBm (MCS0), -63 dBm (MCS9)
Max. Transmit Power	<ul style="list-style-type: none"> ● 2.4 GHz: 100 mW ● 5 GHz: 400 mW (26 dBm) (single stream)
Power Step	1 dBm
Dimensions (W x D x H)	240 mm x 133 mm x 108 mm (9.45 in. x 5.24 in. x 4.25 in.) (excluding the mounting bracket)
Weight	0.73 kg (1.61 lbs.) (excluding packaging materials) 2.55 kg (5.62 lbs.) (including packaging materials and one pair)
Service Ports	3 x 10/100/1000BASE-T auto-negotiation ports, where LAN1/PoE port supports 24 V PoE input
Buttons	1 x Reset/One-Touch Pairing button
LED	1 x system LED, 3 x port LEDs, and 3 x signal LEDs
Power Supply	<ul style="list-style-type: none"> ● 24 V passive PoE power supply (A passive PoE injector is delivered with the wireless bridge.) ● 12 V DC (solar panel)
Max. Power Consumption	< 12 W
Environment	<p>Operating temperature: -30°C to +65°C (-22°F to +149°F)</p> <p>Storage temperature: -40°C to +85°C (-40°F to +185°F)</p> <p>Operating humidity: 5% RH to 95% RH (non-condensing)</p> <p>Storage humidity: 5% RH to 95% RH (non-condensing)</p>
Mounting	<ul style="list-style-type: none"> ● Wall-mount ● Pole-mount
IP Rating	IP55
Certification	CE
MTBF	> 400000 hours

 **Warning**

Operation of this equipment in a residential environment could cause radio interference.

Note

The weight refers to the weight of the main unit.

1.5 Power Supply Technical Specification

The RG-EST350G can be powered by 12 V/1.2 A DC power supply, 24 V passive PoE power supply, and IEEE 802.3at/af-compliant PoE power supply. It is supplied with a 24 V/0.6 A DC power adapter and a 1000 Mbps passive PoE injector.

- Technical specifications of the DC adapter:

Inner Diameter	Outer Diameter	Depth
2.10 mm ± 0.1 mm (0.083 in. ± 0.004 in.)	5.50 mm ± 0.1 mm (0.22 in. ± 0.004 in.)	10 mm ± 0.5 mm (0.39 in. ± 0.02 in.)

Warning

- For DC power supply, the DC adapter required for this wireless bridge is not included in the package. You can purchase the DC adapter separately from us.
- For PoE power supply, use the provided PoE injector in the package. Do not use other models of PoE injectors or switches for power supply as it may lead to irreparable damage to the device.
- When using a DC power supply to power the device, ensure that the power output of the DC power supply is less than 100 W.

2 Preparing for Installation

2.1 Safety Precautions

Note

- To prevent device damage and physical injury, please read carefully the safety precautions described in this chapter.
 - The following safety precautions do not cover all possible dangers.
-

2.1.1 General Safety Precautions

- Do not expose the device to high temperature, dusts, or harmful gases. Do not install the device in an inflammable or explosive environment. Keep the device away from EMI sources such as large radar stations, radio stations, and substations. Do not subject the device to unstable voltage, vibration, and noises.
- The installation site should be far away from the sea. Keep the device at least 500 meters away from the seaside and do not face it toward the wind from the sea.
- The installation site should be free from water flooding, seepage, dripping, or condensation. The installation site shall be selected according to network planning and features of communications device, and considerations such as climate, hydrology, geology, earthquake, electric power, and transportation.

Caution

Please follow the correct procedures described in the installation guide to install and remove the device.

2.1.2 Handling Safety

- Avoid frequently handling the device.
- Cut off all the power supplies and unplug all power cords before moving or handling the device.

2.1.3 Electrical Safety

Warning

- Improper or incorrect electrical operations may cause a fire, electric shock, and other accidents, and lead to severe and fatal personal injury and device damage.
 - Direct or indirect contact with high voltage or mains power supply via wet objects may cause fatal dangers.
-

- Observe local regulations and specifications during electrical operations. Only personnel with relevant qualifications can perform such operations.
- Check whether there are potential risks in the work area. For example, check whether the power supply is grounded, whether the grounding is reliable, and whether the ground is wet.
- Find out the location of the emergency power supply switch in the room before installation. First cut off the power supply in case of an accident.
- Be sure to make a careful check before you shut down the power supply.

- Do not place the device in a damp/wet location. Do not let any liquid enter the device.
- Keep the device far away from the grounding or lightning protection devices of power device.
- Keep the device away from high-power radio stations, radar stations, and high-frequency high-current devices.

2.2 Installation Environment Requirements

To ensure normal operation and a prolonged useful life of the device, the installation site must meet the following requirements.

2.2.1 Environment

- Install the device in a well-ventilated environment. If it is installed in a closed room, make sure there is a good cooling system.
- Make sure the site is sturdy enough to support the device and its accessories.
- Make sure the site has enough space for installing the device and leave sufficient space around the device for ventilation.

2.2.2 Surge Protection

- When the connection cable between the main grounding conductor and local equipotential earthing terminal board (LEB) on each floor is shorter than 2 meters, use a stranded copper wire with a sectional area not less than 1.318 mm² (16 AWG) for the connection cable.
- Use a shielded network cable if possible, ensure that devices connected to both ends of the shielded network cable are reliably grounded, and make sure that the sheath of the shielded network cable is also grounded if possible. If no shielded network cable is available, wire the network cable through a steel pipe and bury the steel pipe for lead-in, and properly ground both ends of the steel pipe.
- No additional lightning protector is required as a high-profile lightning protector is built in the device and the antenna port and power port support 4kV lightning protection. If a lightning protector of a higher profile is available, configure the lightning protector optionally. Before the configuration, connect the lightning protector to the ground cable.

2.2.3 Temperature and Humidity

To ensure the normal operation and prolonged service life of the device, maintain an appropriate temperature and humidity in the equipment room. The equipment room with too high or too low temperature and humidity for a long period may damage the device.

- In an environment with high humidity, the insulating material may have bad insulation or even leak electricity and sometimes the materials may suffer from mechanical performance change and metallic parts may get rusted.
- In an environment with low humidity, the insulating strip may dry and shrink, and static electricity is prone to occur and damage the internal circuits of the device.
- In an environment with high temperature, the device is subjected to even greater harm, as its performance may degrade significantly and its useful life may be shortened in the case of long-term exposure that expedites the aging process.

Table 2-1 Temperature and Humidity Requirements

Operating Temperature	Operating Humidity:
–30°C to +65°C (–22°F to +149°F)	5% RH to 95% RH (non-condensing)

2.2.4 Anti-interference

- Take interference prevention measures for the power supply system.
- Keep the device away from the grounding facility or lightning and grounding facility of the power device as much as possible.
- Keep the device far away from high-power radio stations, radar stations, and high-frequency high-current devices.

2.3 Tools

Table 2-2 Tools

Common Tools	Marker, Philips screwdriver, drill, hammer, hose clamp, related copper and fiber cables, diagonal pliers, cable ties
Special Tools	Anti-ESD gloves, wire stripper, crimping plier, RJ45 crimping plier, wire cutter, and waterproof adhesive tape
Meters	Multimeter, network cable tester
Relevant Devices	PC, display, and keyboard

Note

The RG-EST350G wireless bridge is not shipped with a tool kit. You need to prepare a tool kit by yourself.

2.4 Checking Before Installation


After unpacking the product, carefully inspect each item in accordance with the provided package contents. If any inconsistencies are found, please contact our local distributor.

3 Installation

Caution

Before installing the device, make sure you have carefully read the requirements described in Chapter 2.

3.1 Installation Procedure

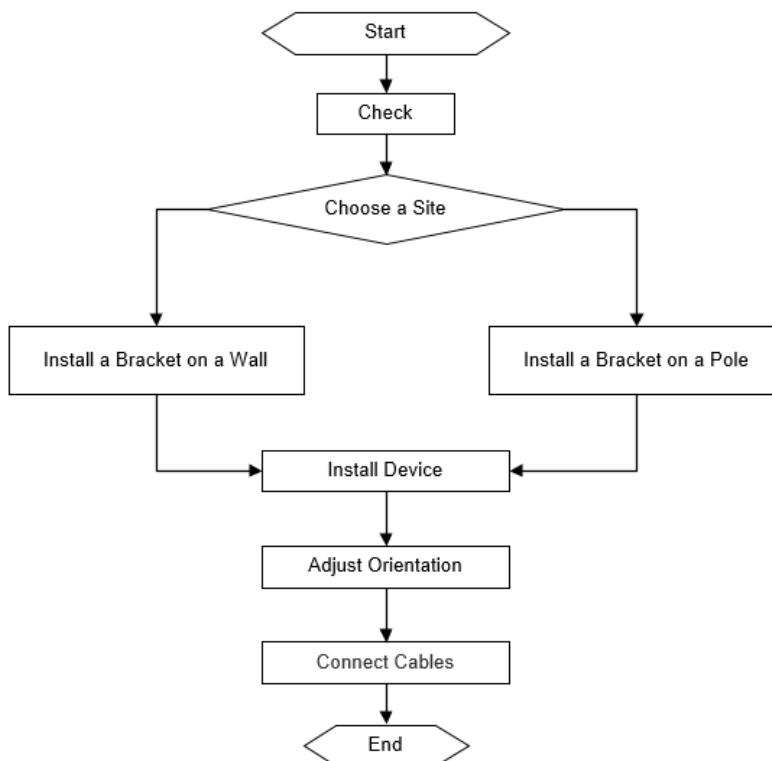

3.2 Before You Begin

Carefully plan and arrange the installation location, networking mode, power supply, and cabling before installation. Confirm the following requirements before installation:

- The installation site provides sufficient space for heat dissipation.
- The installation site meets the temperature and humidity requirements of the device.
- The power supply and required current are available in the installation position.
- The selected power supply modules meet the system power requirement.
- The network cables have been deployed in the installation position.
- The installation site meets all described requirements.
- The device meets the customers' requirements.

3.3 Safety Precautions During Installation

The device can be mounted on a wall or a pole with a diameter of 35 mm to 89 mm (1.38 in. to 3.50 in.). If the diameter of the pole is out of the range, the customer should prepare a hose clamp. In this case, we strongly recommend you to use a hose clamp with a thickness of 2.5 mm (0.10 in.) at least. Otherwise, the device may fall down and cause injuries. To ensure minimal interference when installing multiple wireless bridges in close proximity, maintain a horizontal installation distance of at least 2 meters (6.56 ft), or a vertical installation distance of at least 0.5 meters (1.64 ft) between each wireless bridge. Ensure that the horizontal angle formed by the two wireless bridges is greater than 120 degrees. The specific installation location of the wireless bridge should be determined by professionals after conducting a thorough site survey.

Before installation, ensure that the installation location meets the requirements in [2.2 Installation Environment Requirements](#), and pay attention to the following:

- Use the supplied 24 V/0.6 A DC power adapter or an equivalent power source with the same specifications to power the equipment. Do not use adapters with different specifications.
- When the equipment is powered by 24 V passive PoE and is operating under full load (with simultaneous 2.4 GHz, 5 GHz, and wired connectivity), the maximum recommended cable length for the Cat5e cable is 80 m (262.47 ft).
- Ensure that the Ethernet cable and power cord are securely connected.


3.4 Mounting the Device

⚠ Caution


- Install the device in a manner that maximizes the coverage area of the antenna.
- The schematic diagram provided is for reference purposes only. The actual product should be installed based on its physical specifications and design.

3.4.1 Wall Mounting

- (1) Secure the mounting bracket on the wall.
- (2) Install the device to the mounting bracket.

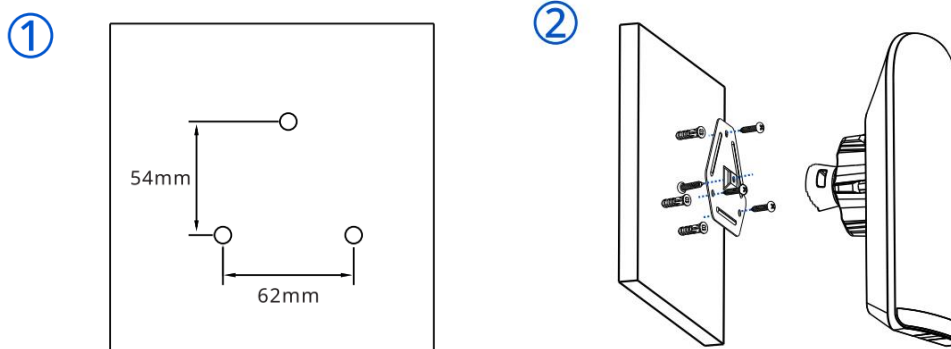


- (3) Adjust the orientation.

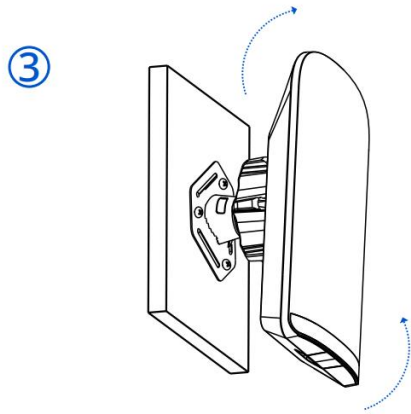


3.4.2 Pole Mounting


- (1) Install the device to the mounting bracket.

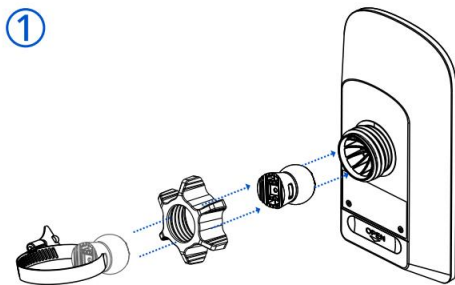

- (2) Secure the mounting bracket to the pole by threading a clamp through the mounting bracket.

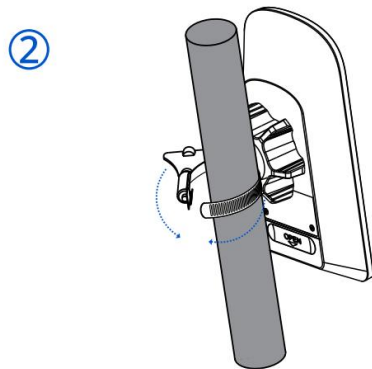

- (3) Adjust the orientation.

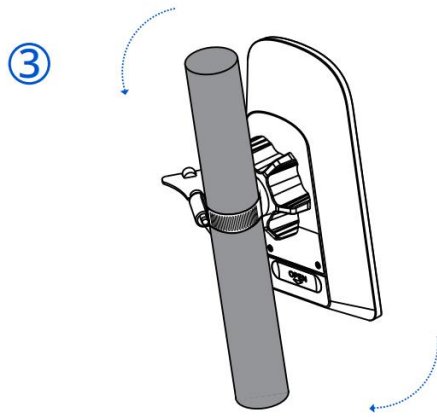

3.5 Connecting Cables

- (1) Select or make a cable (CAT5e or higher) according to the distance between the wireless bridge and the PoE injector.
- (2) Connect one end of the Ethernet cable to the PoE port of the 1000 Mbps passive PoE injector, and the other end to the LAN1/PoE port on the bridge. Connect the LAN port of the 1000 Mbps passive PoE injector to a server or IP camera using another Ethernet cable. Connect the 24 V/0.6 A DC power adapter to the DC power connector of the PoE injector for power supply. Alternatively, connect a 12 V DC solar panel to the DC connector of the bridge for power supply. Then, connect a LAN port on the bridge to a server or IP camera using an Ethernet cable.

Figure 3-1 Connecting the Ethernet Cable to the Passive PoE Injector


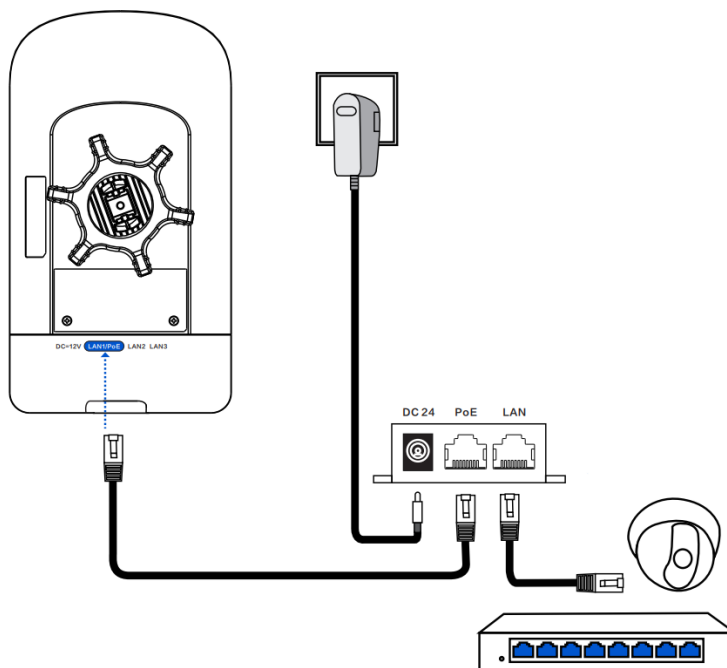


Figure 3-2 Connect the Ethernet cable to a solar panel

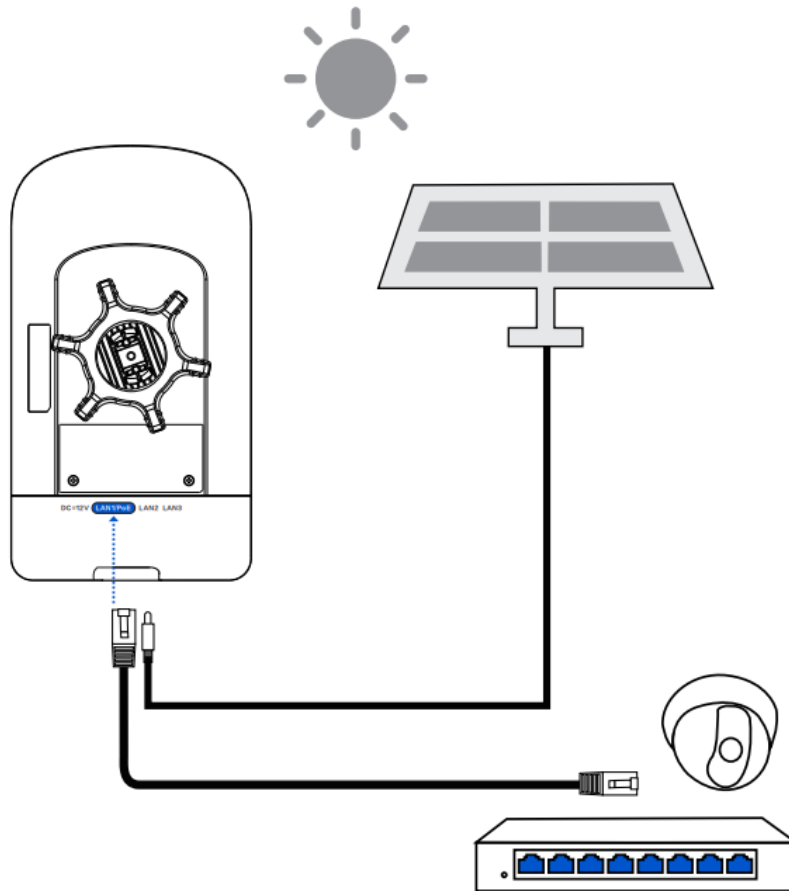

Solar Panel

Solar panels convert light energy from sunlight into electrical energy. The EST350G requires a solar power panel with an output specification of 12V/1.2A DC.

Notes for Installing the Solar Panel

Because the sun’s position differs between the Northern and Southern Hemispheres, the solar panel should face south in the Northern Hemisphere and north in the Southern Hemisphere to achieve optimal power output. Additionally, the tilt angle of the solar panel affects the efficiency of solar energy conversion. The optimal tilt angle varies with latitude. The following table shows the optimal tilt angles for different latitude ranges.

Latitude Range	Optimum Tilt
0°–10°	10°–20°
10°–20°	20°–30°
20°–30°	30°–40°
30°–40°	40°–50°

40°–50°	50°–60°
50°–60°	Approximately 60°

 **Warning**

- Remember to install the bottom cover for waterproof and dustproof purpose.
 - Please do not use a switch or a PoE injector of another model. Otherwise, the device may be damaged.
-

3.6 Verifying the Installation

(1) Check the device

- Verify that the external power supply matches the specification.
- Verify that the device is firmly and reliably secured.

(2) Check the power supply

- Verify that the power cord is properly connected and meet safety requirements.
- Verify that the device works properly after power-on.

4 Debugging

4.1 Power-On

- (1) Checklist Before Power-On
 - The power cord is properly connected.
 - The power voltage meets the requirement.
- (2) Recommended: After the bridge is powered on, check whether the LED status is normal.

4.2 Configuring the Bridge

- Method 1: Configure the bridge through Ruijie Reyee App

- (1) The power cord is properly connected.
- (2) Scan the QR code on this page or on the device to download and install Ruijie Reyee App.



- (3) Log in to Ruijie Reyee App.

- Method 2: Log in to eWeb for configuration

- (1) Connect the LAN port of the bridge to a PC using an Ethernet cable for wired connection, or connect your smartphone or PC to the device's SSID (default SSID: @Ruijie-bxxxx) for wireless connection.
- (2) Enter **https://10.44.77.254** in a browser to access the device's eWeb.
- (3) Enter the device password (default password: admin) and click **Login** to log in to eWeb for configuration.

⚠ Caution

- Enter the initial password **admin** to log in and begin configuration.
 - To ensure device security, set a password after login and change the password regularly.
-

5 Monitoring and Maintenance

5.1 Monitoring


When the RG-EST350G is running, you can monitor the device status by observing the indicator.

5.2 Maintenance

If a hardware error occurs, please contact Ruijie Reyee Technical support for help.

6 Troubleshooting

6.1 General Troubleshooting Procedure

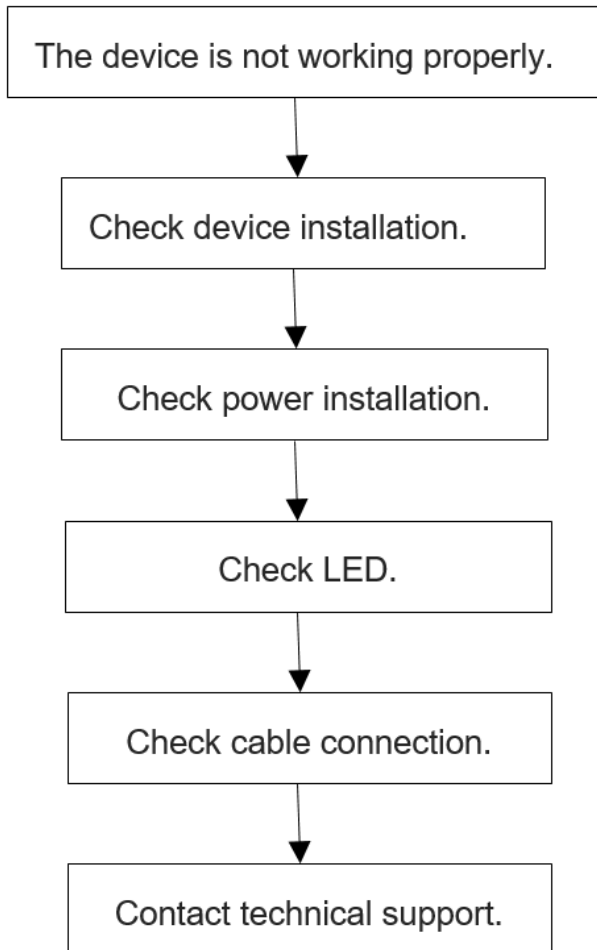

7 Appendix A Connectors and Media Description


1000BASE-T/100BASE-TX/10BASE-T

The 1000BASE-T/100BASE-TX/10BASE-T is a 10/100/1000 Mbps auto-negotiation port that supports auto MDI/MDIX.

Compliant with IEEE 802.3ab, 1000BASE-T requires Category 5e 100-ohm UTP or STP (STP is recommended) with a maximum distance of 100 meters (328 feet).

1000BASE-T requires all four pairs of wires be connected for data transmission, as shown in [Figure 7-1](#).

Figure 7-1 1000BASE-T Connection

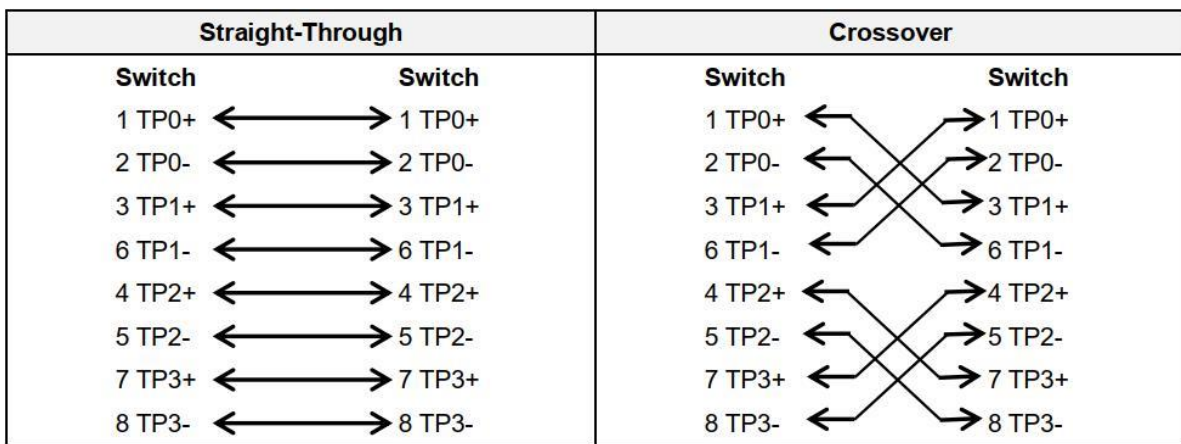

10BASE-T uses Category 3, 4, 5 100-ohm UTP/STP and 1000BASE-T uses Category 5 100-ohm UTP/STP for connections. Both support a maximum length of 100 meters. [Figure 7-2](#) shows 100BASE-TX/10BASE-T pin assignments.

Figure 7-2 100BASE-TX/10BASE-T Pin Assignments

Pin	Socket	Plug
1	Input Receive Data+	Output Transmit Data+
2	Input Receive Data-	Output Transmit Data-
3	Output Transmit Data+	Input Receive Data+
6	Output Transmit Data-	Input Receive Data-
4,5,7,8	Not used	Not used

[Figure 7-3](#) shows wiring of straight-through and crossover cables for 100BASE-TX/10BASE-T.

Figure 7-3 100BASE-TX/10BASE-T Connection

